

# X410

## Quick Start Guide

### BASIC SETUP STEPS



1. Connect unit to power and to a network.
2. Connect a computer on the same network as the module. Set the IP address of the computer to 192.168.1.50 with a netmask of 255.255.255.0.
3. Configure the X-410 module using a web browser. In a web browser's address bar, type:  
`http://192.168.1.2/setup.html` Type the default username, `admin` and default password, `webrelay` (all lower case).
4. Set the permanent IP address in the Network tab and press Submit. Restart the X-410 (remove power, then re-apply power).
5. After restarting the unit, set the computer back to its original settings and access the X-410 module at its new IP address.

### FACTORY DEFAULT SETTINGS:

**IP Address:** 192.168.1.2  
**Subnet Mask:** 255.255.255.0  
**Control Web Address:** `http://192.168.1.2`  
**Control Password:** no password set  
**Setup Web Address:** `http://192.168.1.2/setup.html`  
**Setup Username:** admin  
**Setup Password:** webrelay (all lower case)

Users manual may be downloaded at:  
[www.ControlByWeb.com/support](http://www.ControlByWeb.com/support)

For technical support, please email: [support@ControlByWeb.com](mailto:support@ControlByWeb.com)

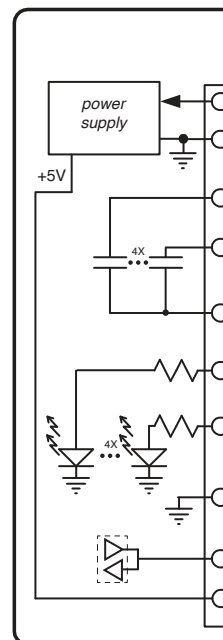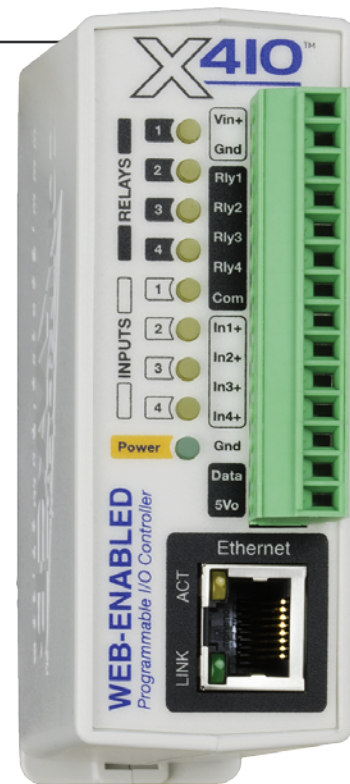

### Pinout:

<b>Power</b>	<b>Vin+</b>	Power Supply Input (+)
	<b>Gnd</b>	Power Supply Input (-)
<b>Relays</b>	<b>Rly1</b>	Relay 1 Normally Open
	<b>Rly2</b>	Relay 2 Normally Open
	<b>Rly3</b>	Relay 3 Normally Open
	<b>Rly4</b>	Relay 4 Normally Open
	<b>Com</b>	Common for all relays
<b>Inputs</b>	<b>In1+</b>	Digital Input 1+
	<b>In2+</b>	Digital Input 2+
	<b>In3+</b>	Digital Input 3+
	<b>In4+</b>	Digital Input 4+
	<b>Gnd</b>	Ground for inputs & temp
<b>Temp</b>	<b>Data</b>	Data
	<b>5Vo</b>	+5VDC output

**CONTROL** by **WEB**™  
[www.ControlByWeb.com](http://www.ControlByWeb.com)

a division of...  
**Xytronix Research & Design, Inc.**  
Nibley, Utah, USA